

AIR HEAT EXCHANGER WITH ELECTRICAL PREHEATER

AIR HEAT EXCHANGER FOR HVAC

NOZZLE WITH ORIFICE

FLANGE

Figure 1.7-1—P&ID Symbol Legend

<u>VESSELS</u>		FILTERS/SILENCERS	MISCELLA	<u>NEOUS</u>	<u>SENS</u>	<u>sors</u>	MOTORS	/ACTUATORS	LINE TY	<u>PE</u>
REA	ACTOR VESSEL	FILTER	} RU	JPTURE DISK DEVICE	P	PRESSURE	M—	ELECTRIC MOTOR		STEAM LINE FLOW LINE
		SILENCER/MUFFLER	OR DR	DRAIN TRAP	(1)	TEMPERATURE	TURBINE	SLUDGE WATER		
STE	EAM GENERATOR	IODINE FILTER		OZZLE JSH BUTTON		RADIATION	· 一	MANUAL DIAPHRAM		BUILDING OIL PIPE
PRE	ESSURIZER	SEPARATOR	1	TIRRER	(R) (FE)	FLOW ELEMENT	F	PISTON	====	GASES
COMPRES	SSORS	GAS/AIR FILTER		ONTAINMENT ENETRATION	H	MOISTURE	P	SOLENOID	HVAC	ZZZZZZ CONCRETE
(I) FAN	N, BLOWER TYPE	DEMINERALIZER	PR	ROTECTIVE GRATING	B	BORON		ACTUATOR (GENERIC)		AIR SHUT-OFF DAMPER
	MPRESSOR/VACUUM PUMP	LIQUID FILTER	DD DE	ESIGN AREA BREAKS	$\bigcirc P$	DIFFERENTIAL PRESSURE	<u>VALV</u>	<u>ES</u>	**	LOUVER DAMPER
DLIMDS		LIQUID FILTER		CO TYPE OFNIBILIZE	POS	POSITION		BUTTERFLY GENERIC		FIRE DAMPER
<u>PUMPS</u>	PUMP	MIXING PIPE MOISTURE SEPARATOR		DISC-TYPE CENTRIFUGE	V	VELOCITY/VIBRATION	\triangleright	GLOBE		GAS-TIGHT DAMPER
PUN			so	SCREW-TYPE CENTRIFUGE	TG	TOXIC GAS		3-PORT		BACKDRAFT DAMPER
<u>EXCHANGERS</u>		PRE AIR FILTER			H2)	HYDROGEN	(M)	(P)		AIR INLET
HEA	AT EXCHANGER	PIPE FITTING/FLOW_ ELEMENTS	LIC	QUID TO LIQUID EVAPORATOR	(O2)	OXYGEN		ANGLE GLOBE		AIR OUTLET
HEA	HEAT EXCHANGER	FLOW RESTRICTOR	EV	EVAPORATOR COLUMN	(S) (C)	SMOKE CONDUCTIVITY	•~	CHECK	I	<u>PROTECTION</u>
		REDUCER FLEXIBLE HOSE	TANKS				\$	MINIMUM FLOW	√	OUTDOOR HYDRANT
→ HEA	AT EXCHANGER COIL	CAP		NK				SAFETY RELIEF ANGLE GLOBE		FIREHOSE VALVE POST INDICATOR VALVE
TUF	RBINE SURFACE CONDENSER	✓ FUNNEL	IA IA	NV.				SAFETY RELIEF ANGLE GLOBE ACTUATED BY MEDIUM IN LINE		
		DRAIN PAN	PC	OOL/BASIN				HVAC CONTAINMENT ISOLATION VALVE		
	TUBE HEAT EXCHANGER MIDIFIER	SPRAY NOZZLE () EPANSION JOINT	7///// su	JMP			₩ ₩	VACUUM BREAKER		
	HEAT EXCHANGER	HALF COUPLING SCREWED PLUG	<i>Y</i>				T			

REV 001 EPR0030 T2